

Item Level Printing Guide

Before for Printing Item Tags

- Be sure your printer is properly calibrated.
- Double check the sensor position. The light sensor inside the printer must not pass over the hole in the TI-1 RFID labels.

Step 1. Log into Nox by navigating to the Nox homepage using Internet Explorer entering your User ID and Password.

Step 2. Click on the **DoD** tab at the top of the Nox screen, then click on the **NSNs** link in the DoD navigation menu.

Step 3. Find your NSN in the list by pressing CTRL + F then typing the last four digits of your NSN. Click on the NSN to bring up more information about it.

Step 4. Double check the 'Number of Cases per Pallet' and the 'Number of Items per Case' values, then click on 'Print Tags for This NSN'.

Step 5. Enter the number of labels you need to print in the 'Quantity' field and select your item-level RFID printer. Then click the Print button.

Notes:

- Remove any RFID tags that appear damaged.
- Remove any RFID tags that say VOID or FAULT.
- Do not bend or fold RFID tags when packing.
- Do not pack more than one RFID tag per garment.
- Keep all RFID tags away from Nox Conveyor, or Nox Palletizer areas.

Getting Help

(703) 343-1689 SimplyRFiD Support