

Palletizing RFID

Before Operating the Pallet RFID Station

- Make sure the RFID printer is turned on. Press the feed button to ensure the labels are calibrated correctly.
- Turn on the touch-screen PC.
- Keep the pallet area clear of RFID tags. Do not store RFID tags near the pallet station.
- Make sure the pallet is centered on the shrink-wrap machine and that it has enough clearance to avoid damaging the RFID readers.

Step 1. Center a pallet containing RFID tagged cases on the shrink-wrap machine.

Step 2. The touch screen will announce the number of tags it sees. It should be between 5 and 10.

Step 3. Turn on the shrink-wrap machine to spin the pallet. Nox will begin counting the number of tags it sees.

Step 4. Once Nox has found all of your cases, you can tap the right side of the screen to pack the pallet. Nox will prompt you with a message saying, "Pack Pallet?" Tap the right side of the screen again to confirm.

Step 5. A pallet RFID tag will be printed. Peel and apply the tag to the outside of the shrink wrap.

Note: You will not be able to print a pallet RFID tag if there are any errors, clear out all errors by removing tags from the area, or by removing cases that conflict with the shipment.

Getting Help

(703) 343-1689 SimplyRFID Support